

MB207

MERCEDES Spinter 208 / 308 / 408 / 211 / 311 / 411 / 213 / 313 / 413 CDI

Dal 2000 al 2006 - motore OM611 - 2150 cc - 4 cilindri - con A/C - con predisposizione N63
From 2000 to 2006 - engine OM611 - 2150 cc - 4 cylinders - with A/C - with predisposition N63

MERCEDES Spinter 216 / 316 / 416 / 616 CDI

Dal 2000 al 2006 - motore OM612 - 2686 cc - 5 cilindri - con A/C - con predisposizione N63
From 2000 to 2006 - engine OM612 - 2686 cc - 5 cylinders - with A/C - with predisposition N63


Istruzioni di montaggio innesto elettromagnetico

Electromagnetic coupling kit installation instructions



- Eliminare la puleggia tendicinghia e La sua staffa
- Montare la frizione elettromagnetica e la pompa nella staffa

- *Eliminate the idler pulley and his bracket*
- *Mount the electromagnetic clutch and the pump in the bracket*

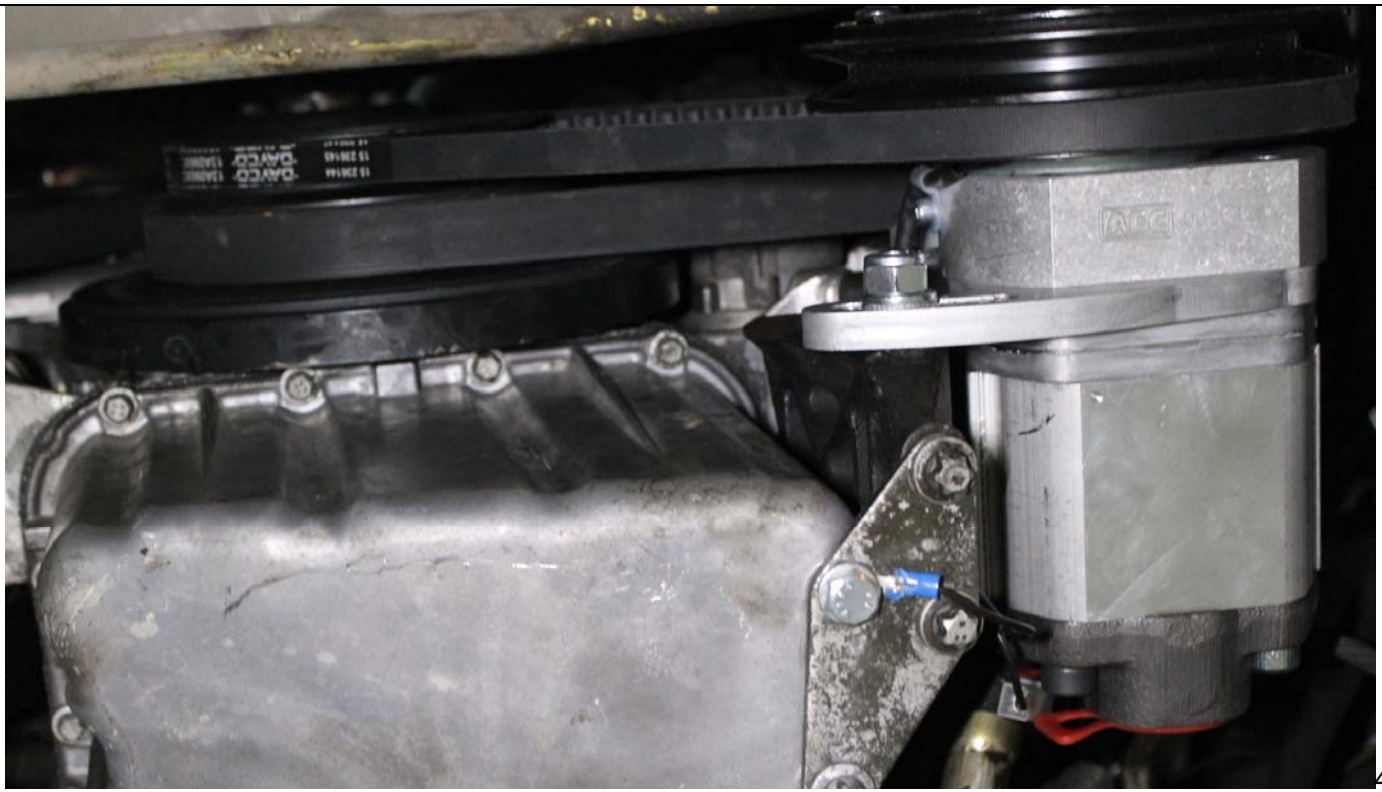

- Montare la cinghia
- *Install the belt*